

## TEAR

Příslušenství k lištovému systému



TEAR PR-90B-WH

|                  |              |
|------------------|--------------|
| TEAR PR-90B-WH   | <b>22582</b> |
| TEAR PR-FLEX-WH  | <b>22584</b> |
| TEAR PR-I-WH     | <b>22585</b> |
| TEAR PR-I-B-WH   | <b>22586</b> |
| TEAR PR-PLUG-WH  | <b>22587</b> |
| TEAR PR-T-LLR-WH | <b>22589</b> |
| TEAR PR-T-RRL-WH | <b>22590</b> |
| TEAR PR-X-WH     | <b>22591</b> |
| TEAR TR 2M-WH    | <b>22593</b> |



TEAR PR-90B-WH



TEAR PR-FLEX-WH



TEAR PR-I-WH



TEAR PR-I-B-WH

## TEAR

### Příslušenství k lištovému systému



TEAR PR-PLUG-WH



TEAR PR-T-LLR-WH




TEAR PR-T-RRL-WH




TEAR PR-X-WH




TEAR TR 2M-WH

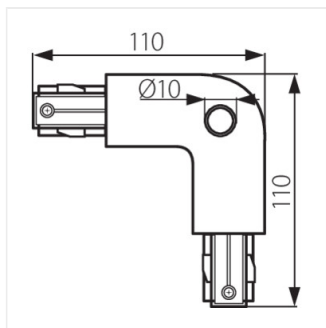


TEAR PR-90B-WH

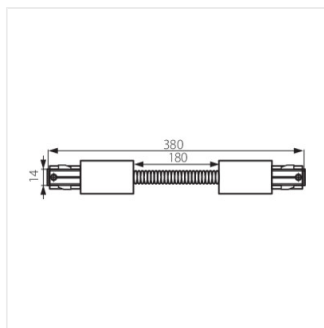


TEAR PR-FLEX-WH

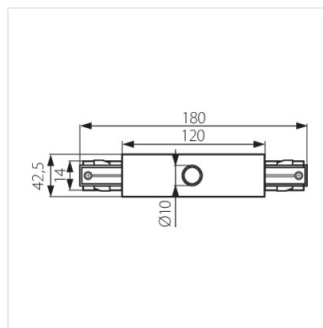


TEAR PR-I-WH

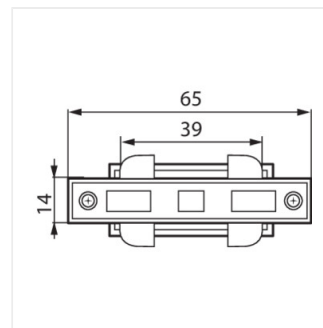


TEAR PR-I-B-WH

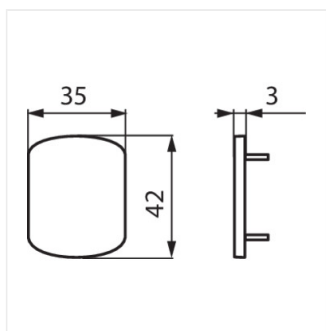


TEAR PR-PLUG-WH

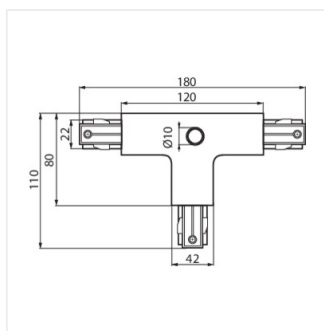

TEAR PR-T-LLR-WH

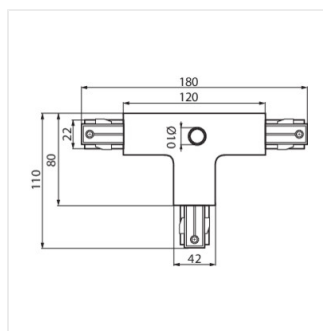


TEAR PR-T-RRL-WH

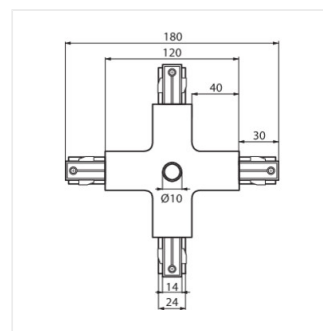


TEAR PR-X-WH

## TEAR



### Příslušenství k lištovému systému

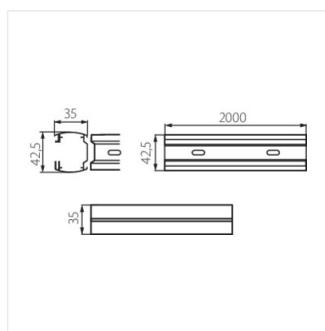

TEAR TR 2M-WH

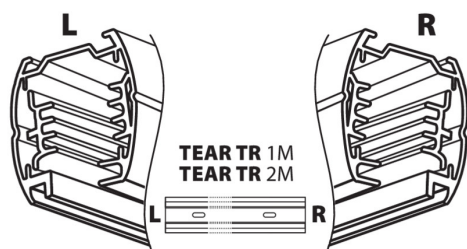

**N** —

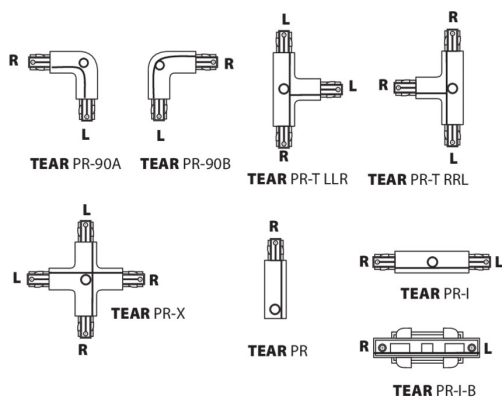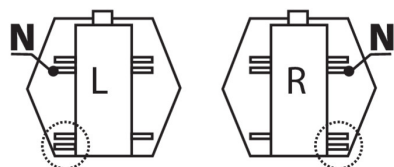

## TEAR

### Příslušenství k lištovému systému

