



BS-1 4-22W



BS-1 4-22W	07180	4-22
BS-2 4-65W	07181	4-65



BS-1 4-22W




BS-2 4-65W

## BS

---

### Startéry BS

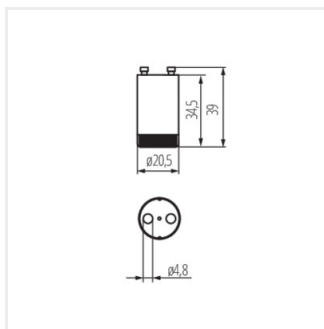

BS