

AVAR DRIVER

Alimentation LED



|                                      |                               |                                |                                       |                |                             |             |
|--------------------------------------|-------------------------------|--------------------------------|---------------------------------------|----------------|-----------------------------|-------------|
| <div>[V]</div> <div>220-240 AC</div> | <div>[Hz]</div> <div>50</div> | <div>CC</div> <div></div>      | <div>PRI [V]</div> <div>220-240</div> | <div>F</div>   | <div>IP</div> <div>20</div> | <div></div> |
| <div></div>                          | <div></div>                   | <div></div> <div>0,2-1,5</div> | <div>CE</div>                         | <div>EAC</div> | <div>UK</div> <div>CA</div> |             |

AVAR DALI SET 40W

|                   |              |                     |             |             |
|-------------------|--------------|---------------------|-------------|-------------|
|                   | <div></div>  | <div>SEC [mA]</div> | <div></div> | <div></div> |
| AVAR DALI SET 40W | <b>28512</b> | 45                  | 950         | DALI        |
|                   |              |                     |             | blanc       |

- Matériau: matériau plastique




AVAR DALI SET 40W

## AVAR DRIVER

---

### Alimentation LED

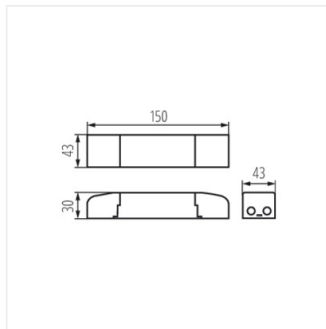

AVAR DALI SET 40W