 


KCS

Przełącznik instalacyjny



KCS-40A/1P

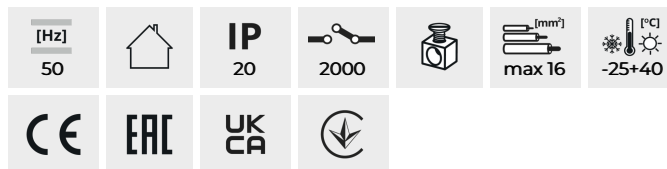

| | | | |
|------------|--------------|------------|---|
| KCS-40A/1P | 23255 | 230/400 AC | 1 |
| KCS-40A/2P | 23256 | 230/400 AC | 2 |
| KCS-40A/3P | 23257 | 230/400 AC | 3 |
| KCS-40A/4P | 23258 | 230/400 AC | 4 |
| KCS-63A/1P | 39400 | 230/400 AC | 1 |
| KCS-63A/2P | 39401 | 230/400 AC | 2 |
| KCS-63A/3P | 39402 | 230/400 AC | 3 |
| KCS-63A/4P | 39403 | 230/400 AC | 4 |

Przełącznik instalacyjny z pozycją "0". Tryb przełączania I-0-II.

KCS

Przełącznik instalacyjny



KCS-40A/1P



KCS-40A/2P



KCS-40A/3P



KCS-40A/4P



KCS-63A/1P



 
KCS-63A/2P




KCS-63A/3P




KCS-63A/4P

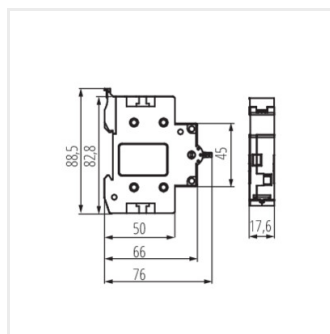


KCS-40A/1P

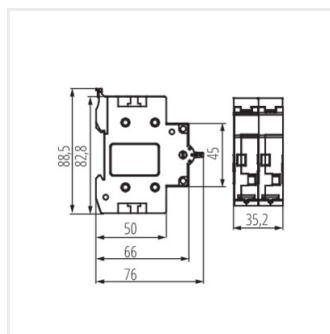 

KCS-40A/2P

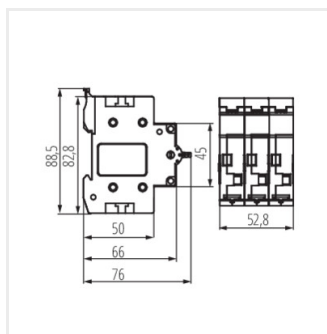 


KCS-40A/3P

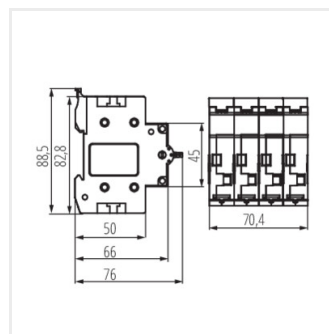 


KCS-40A/4P

KCS

 
Przełącznik instalacyjny

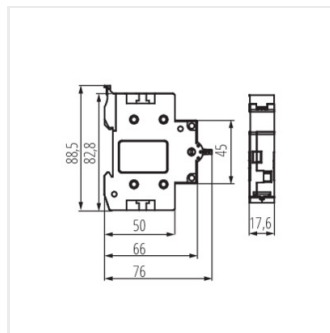


KCS-63A/1P

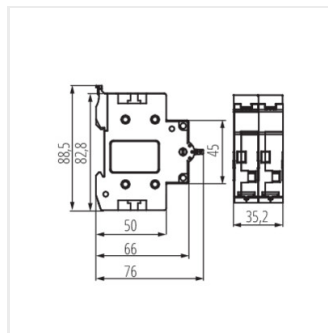 

KCS-63A/2P

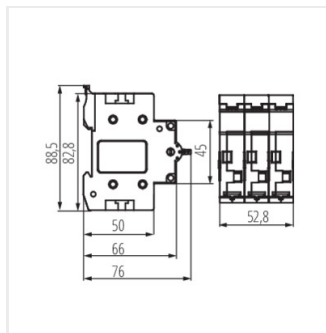 

KCS-63A/3P

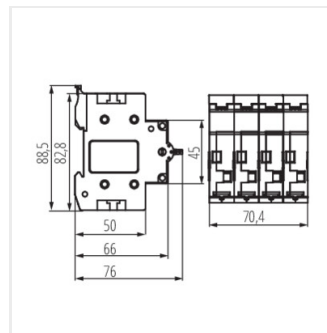 

KCS-63A/4P