 


TEAR

Príslušenstvo k lištovému systému



TEAR PR-90B-WH

TEAR PR-90B-WH	22582
TEAR PR-I-B-WH	22586
TEAR PR-T-LLR-WH	22589
TEAR PR-T-RRL-WH	22590
TEAR PR-X-WH	22591



TEAR PR-90B-WH



TEAR PR-I-B-WH



TEAR PR-T-LLR-WH




TEAR PR-T-RRL-WH

TEAR


Príslušenstvo k lištovému systému




TEAR PR-X-WH

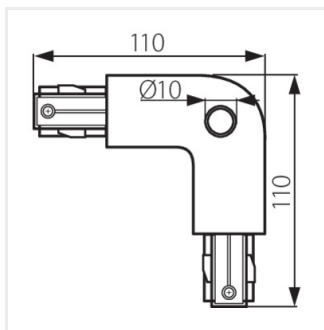


TEAR PR-90B-WH

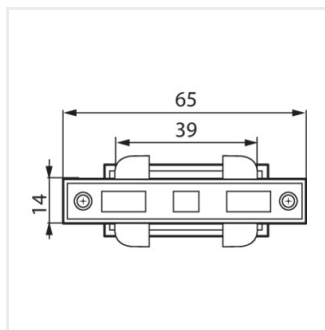


TEAR PR-I-B-WH

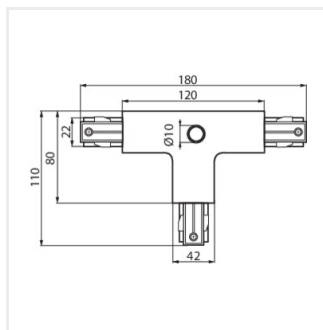


TEAR PR-T-LLR-WH

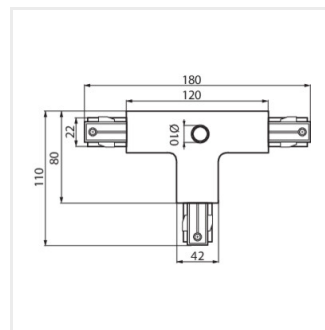

TEAR PR-T-RRL-WH

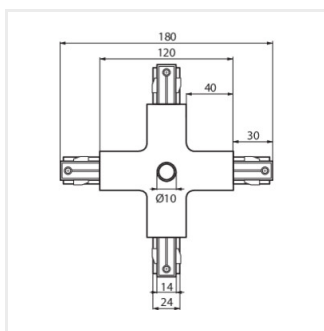



TEAR PR-X-WH

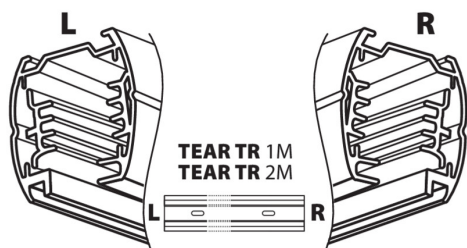

TEAR

Príslušenstvo k lištovému systému

N —

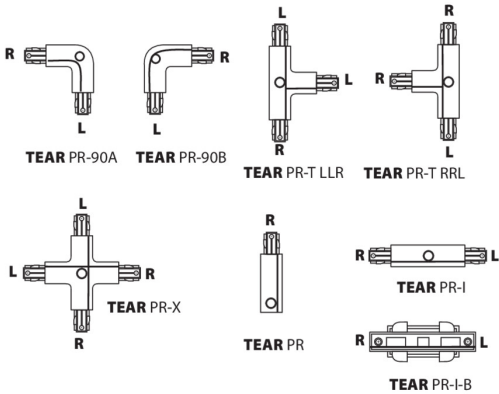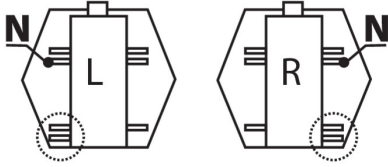

L R
TEAR TR 1M
TEAR TR 2M

220-240V~
50/60Hz

