


## 25217 LOGI 02-1310-143 sr

### Control Shutter Switch

5905339252173

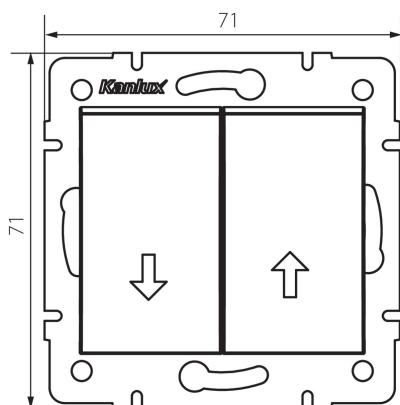

A roller blind switch is used to control power supply systems of external roller blinds. The switch comes with two buttons for moving roller blinds up and down. The switch has a system that makes it impossible to press both buttons at the same time. A monostable switch does not maintain the position, i.e. it goes back to the previous position after pressing.

#### GENERAL DATA:

**Colour:** silver

**Place of assembly:** Recessed mount in the wall

**Highlighting:** no

**Width [mm]:** 71

**Height [mm]:** 71

**Diameter of an installation box:** 60

**Installation depth:** 25

#### TECHNICAL DATA:

**Rated voltage [V]:** 250 AC

**Material of contacts:** CuZn70

**Terminal type:** Screw terminal

**Plastic:** ABS

**Number of levers:** 2

**Rated current [AX]:** 10

**IP class:** 20

#### LOGISTIC DATA:

**Packaging method:** 10

**Number of units in the secondary packaging:** 10

**Number of units in the packaging:** 120

**Net unit weight [g]:** 74

**Grammage [g]:** 86.33

**Length of a unit pack [cm]:** 10

**Width of a unit pack [cm]:** 4

**Height of a unit pack [cm]:** 14

**Weight of a cardboard box [kg]:** 10.3596

## 25217 LOGI 02-1310-143 sr

---

Control Shutter Switch

**Width of a cardboard box [cm]:** 25.5  
**Height of a cardboard box [cm]:** 32  
**Length of a cardboard box [cm] :** 44  
**Volume of a cardboard box [m<sup>3</sup>]:** 0.035904