




# **25255** LOGI 02-1100-141 gr

**Shutter Switch** 

## 5905339252555





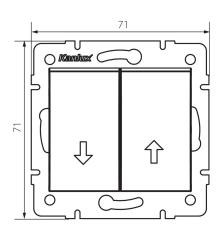









A roller blind switch is used to control power supply systems of external roller blinds. The switch comes with two buttons for moving roller blinds up and down. The switch has a system that makes it impossible to press both buttons at the same time. A bistable switch maintains the position, i.e. it does not go back to the previous position after pressing.

#### **GENERAL DATA:**

Colour: graphite

Place of assembly: Recessed mount in the wall

Highlighting: no Width [mm]: 71 Height [mm]: 71

Diameter of an installation box: 60

Installation depth: 25

#### **TECHNICAL DATA:**

Rated voltage [V]: 250 AC Material of contacts: CuZn70 Terminal type: Screw terminal

Plastic: ABS

Number of levers: 2 Rated current [AX]: 10

IP class: 20

## LOGISTIC DATA:

**Packaging method**: 10

Number of units in the secondary packaging: 10

Number of units in the packaging: 120

Net unit weight [g]: 74 Grammage [g]: 86.42

Length of a unit pack [cm]: 10 Width of a unit pack [cm]: 4 Height of a unit pack [cm]: 14

Weight of a cardboard box [kg]: 10.3704

Date of issue: 15.11.2022, 22:35

We reserve the right to make technical changes. The data contained in this material are not legally binding. Photometry: the results obtained from testing were from a specific sample.







# **25255** LOGI 02-1100-141 gr

**Shutter Switch** 

Width of a cardboard box [cm]: 25.5 Height of a cardboard box [cm]: 32 Length of a cardboard box [cm]: 44

Volume of a cardboard box [m<sup>3</sup>]: 0.035904

Date of issue: 15.11.2022, 22:35

We reserve the right to make technical changes. The data contained in this material are not legally binding. Photometry: the results obtained from testing were from a specific sample.

