


## 33627 LOGI 02-1310-142 cm

### Control Shutter Switch

5905339336279

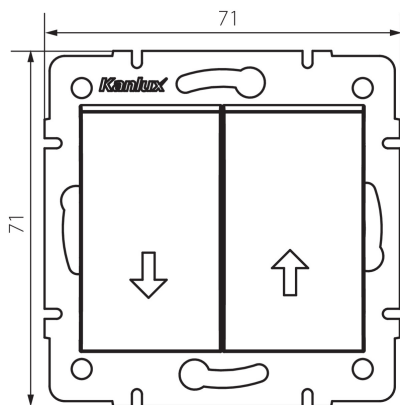

A roller blind switch is used to control power supply systems of external roller blinds. The switch comes with two buttons for moving roller blinds up and down. The switch has a system that makes it impossible to press both buttons at the same time. A monostable switch does not maintain the position, i.e. it goes back to the previous position after pressing.

#### GENERAL DATA:

**Colour:** black matt  
**Place of assembly:** Recessed mount in the wall  
**Highlighting:** no  
**Width [mm]:** 71  
**Height [mm]:** 71  
**Diameter of an installation box:** 60  
**Installation depth:** 25

#### TECHNICAL DATA:

**Rated voltage [V]:** 250 AC  
**Material of contacts:** CuZn70  
**Terminal type:** Screw terminal  
**Plastic:** ABS  
**Number of levers:** 2  
**Rated current [AX]:** 10  
**IP class:** 20

#### LOGISTIC DATA:

**Packaging method:** 10  
**Number of units in the secondary packaging:** 10  
**Number of units in the packaging:** 120  
**Net unit weight [g]:** 74  
**Grammage [g]:** 86.33  
**Length of a unit pack [cm]:** 10  
**Width of a unit pack [cm]:** 4  
**Height of a unit pack [cm]:** 14  
**Weight of a cardboard box [kg]:** 10.3596

## 33627 LOGI 02-1310-142 cm

---

Control Shutter Switch

**Width of a cardboard box [cm]:** 25.5  
**Height of a cardboard box [cm]:** 32  
**Length of a cardboard box [cm] :** 44  
**Volume of a cardboard box [m<sup>3</sup>]:** 0.035904