


33627 LOGI 02-1310-142 cm

Control Shutter Switch

5905339336279

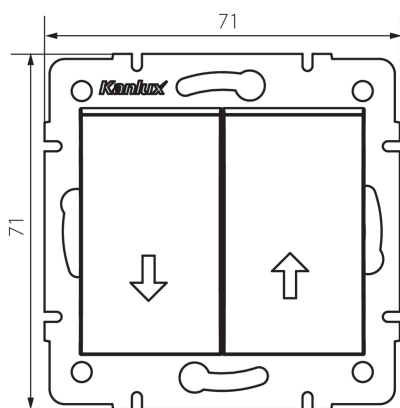

A roller blind switch is used to control power supply systems of external roller blinds. The switch comes with two buttons for moving roller blinds up and down. The switch has a system that makes it impossible to press both buttons at the same time. A monostable switch does not maintain the position, i.e. it goes back to the previous position after pressing.

PRODUCT PARAMETERS:

Colour: black matt
Place of assembly: Recessed mount in the wall
Highlighting: no
Width [mm]: 71
Height [mm]: 71
Diameter of an installation box: 60
Installation depth: 25
Rated voltage [V]: 250 AC
Material of contacts: CuZn70
Terminal type: Screw terminal
Plastic: ABS
Number of levers: 2
Rated current [AX]: 10
IP class: 20

LOGISTIC DATA:

Packaging method: 10
Number of units in the secondary packaging: 10
Number of units in the packaging: 120
Net unit weight [g]: 74
Grammage [g]: 86.33
Length of a unit pack [cm]: 10
Width of a unit pack [cm]: 4
Height of a unit pack [cm]: 14
Weight of a cardboard box [kg]: 10.3596
Width of a cardboard box [cm]: 25.5
Height of a cardboard box [cm]: 32



by **Kanlux** ul. Objazdowa 1-3, 41-922 Radzionków, Poland

33627 LOGI 02-1310-142 cm

Control Shutter Switch

Length of a cardboard box [cm] : 44

Volume of a cardboard box [m³]: 0.035904